



Dismantling of the differential

1

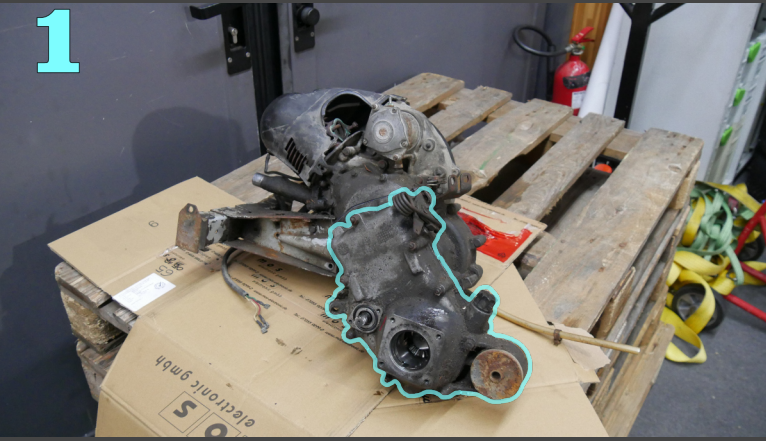


2

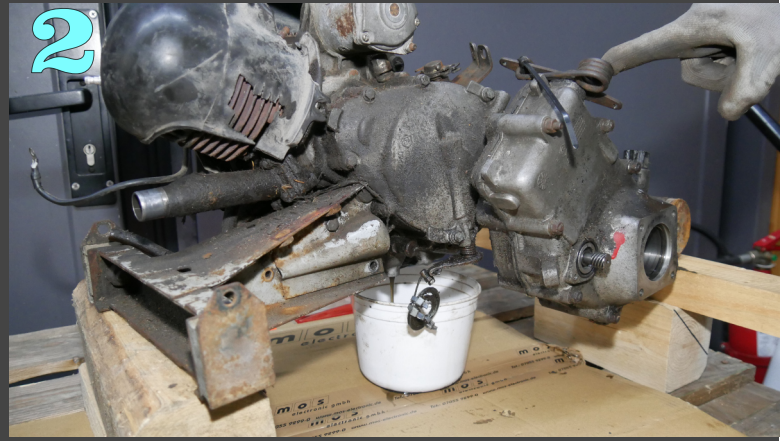


Drain oil

3

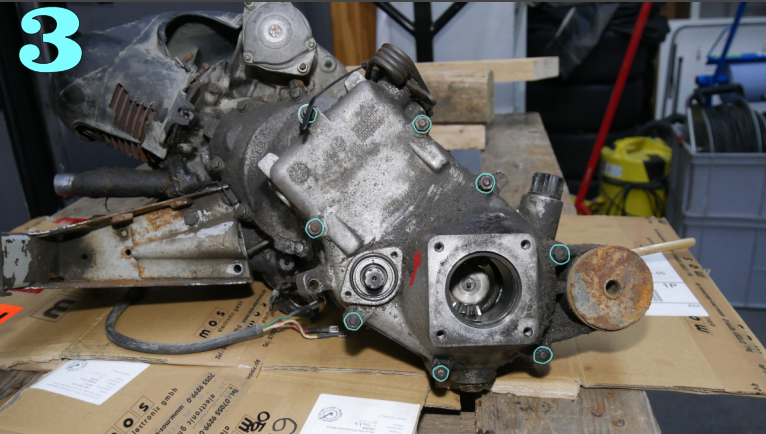

Unscrew the marked screws and remove the casing

4

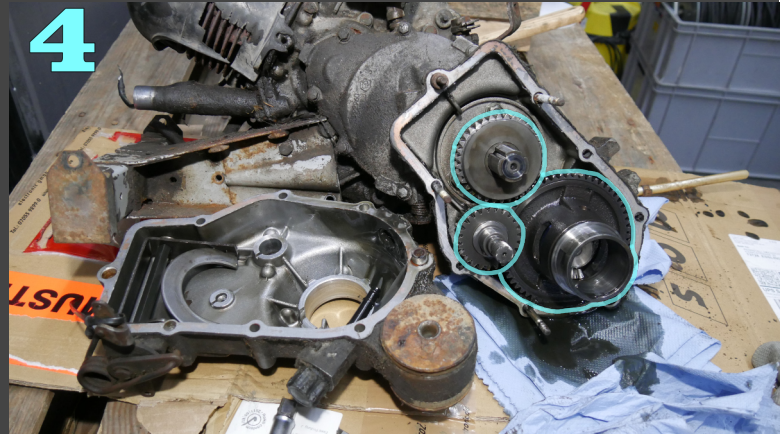

dismantle gears

5



Unscrew the screws located inside the casing

6



Remove the rest of the casing